

Wristband Quick Reference

Handlebar Remote Button Operation

Type	Operation	Button Command	Headset LED
Basic Function	Volume adjustment	Move the Joystick up or down	-
	Configuration menu	Press the Side Button for 12 seconds	-
Bluetooth Pairing	Mobile phone pairing	Press the Joystick for 5 seconds	Blue & red alternatively flashing
	Second mobile phone pairing	Press the Side Button for 5 seconds	Blue flashing
		Tap the Top Button within 2 seconds	
	Media selective pairing	Press the Joystick for 5 seconds	Red flashing
		Tap the Side Button within 2 seconds	
	Phone selective pairing	Press the Joystick for 5 seconds	Blue flashing
		Tap the Top Button within 2 seconds	
	Intercom pairing	Press the Side Button for 5 seconds	Red flashing
		Tap the Side Button of any one of the two Handlebar Remotes	
Mobile Phone	Answer & end phone call	Tap the Top Button	-
	Voice dial	Tap the Top Button	-
	Speed dial	Double tap the Top Button	-
	Reject incoming call	Press the Side Button for 2 seconds	-
Intercom	Start/end each intercom	Tap the Side Button	-
	End all intercoms	Press the Side Button for 1 second	-

Wristband Quick Reference

Handlebar Remote Button Operation

Type	Operation	Button Command	Headset LED
Music	Play/pause Bluetooth music	Press the Joystick for 1 second	-
	Track forward/back	Move the Joystick left or right for 1 second	-
FM Radio	FM radio on/off	Press the Top Button for 1 second	-
	Select preset	Tap the Top Button	-
	Seek stations	Move the Joystick left or right for 1 second	-
	Scan up FM band	Double tap the Top Button	-
	Stop scanning	Double tap the Top Button	-
	Save preset while scanning	Tap the Top Button	-